












- | | | | |
|---|---|--|---|
| <p>1 To switch the transceiver on, press On/Off.
If no PIN needs to be entered the display will show the last channel used.</p> |  | <p>4 Select operating mode (USB-LSB) if using 27MHz CB.</p> |  |
| <p>2 If a PIN is required enter number using microphone key-pad and press Enter/R'call. If correct the display will show the last channel used.</p> |  | <p>5 Tune the antenna system. Press Tune for automatic tuners and antennas.</p> |  |
| <p>3 To select a channel by 'review' rotate Select control to scroll through the programmed channels.</p> |  | <p>6 Switch off selected mute by pressing Mute/9 so that any channel traffic can be heard.</p> |  |
| <p>Or To select a channel by 'recalling' a channel number or frequency press Enter/R'call then use the microphone key-pad to enter the details. Press Enter/R'call again to display the selected channel.</p> |  | <p>7 Adjust Volume control as required.</p> |  |
| | | <p>8 When the channel is clear of voice and data traffic press PTT to transmit. Speak clearly with the microphone held side-on and close to your mouth.</p> |  |

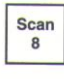


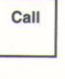


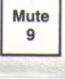

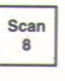
Note: always enter the frequency to one decimal point.

1 to 8 Switching on your transceiver, selecting a channel and making a voice call

Responding to a Selcall within 30 seconds

- | | |
|---|---|
| <p>9 To respond to a call received when in scan mode and during the 'pause scanning' period, press PTT. The display will show the called channel.</p> |  |
| <p>10 When the channel is clear of voice and data traffic again press PTT to transmit. Speak clearly with the microphone held side-on and close to your mouth.</p> |  |

Responding to a Selcall held in memory

- | | | | |
|--|---|---|--|
| <p>11 Resume scanning. Press Scan/8 to commence on the last scan table used.</p> |  | <p>12 Exit from scan mode by pressing Scan. Press Enter/R'call then Call to enter memory and display the last call received. To view and display calls held in memory, rotate the Select control.</p> | 


 |
| <p>14 When the channel is clear of voice and data traffic press F1 to return the selected call.</p> |  | <p>13 Switch off selected mute by pressing Mute/9 so that any channel traffic can be heard.</p> |  |
| <p>15 After receiving the call revertive wait for the station to talk to you before responding, as for 10.</p> |  | <p>16 Repeat 12 to review calls held in memory.</p> | |
| <p>17 Resume scanning. Press Scan/8 to commence on the last scan table used.</p> |  | | |

9 to 17 Responding to Selcall received in scan mode and calls held in memory